TRN1015T

IMPORTANT INSTRUCTIONS

SAVE THESE INSTRUCTIONS

INSTRUCCIONES PARA EL USO

RADIADOR ELECTRICO DE ACEITE
REPASE Y GUARDE ESTAS INSTRUCCIONES

ISTRUZIONI IMPORTANTI

CONSERVARE QUESTE ISTRUZIONI

The De' Longhi electric oil filled radiators are the finest and most versatile portable heaters available.

Please review the following to ensure the fullest benefit from their features.

Los radiadores eléctricos de aceite De'Longhi son los mejores y más versátiles calentadores portátiles en el mercado.
Favor de repasar la información a continuación para asegurar el beneficio completo de sus características.

I radiatori in bagno d'olio De' Longhi sono i migliori ed i più versatili radiatori portatili disponibili sul mercato.
Leggere attentamente quanto segue per ottenere il meglio dalle sue caratteristiche.

TRN1015T

IMPORTANT SAFEGUARDS

When using electrical appliances, basic precautions should always be followed to reduce risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using this heater.
2. If your radiator is equipped with a polythene tape used as carry handle, remove it before connecting appliance to the outlet.
3. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handle when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0,9 m) from the front and top of the heater and keep them away from the sides and rear.
4. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
5. Always unplug heater when not in use.
6. **Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. If heater has leaked any oil, discontinue using the heater and contact the service center as indicated in this instructions leaflet. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.**
7. Do not use outdoors.
8. Never locate heater where it may fall into a bathtub or other water container.
9. **Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or the like. Arrange cord away from traffic area and where it will not be tripped over.**
10. To disconnect heater, turn controls to off, then remove plug from outlet.
11. Connect to properly polarized outlets only.
12. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage the heater.
13. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
14. **A heater has hot or arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.**
15. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
16. To prevent overload and blown fuses, be sure that no other appliance is plugged into the same outlet (receptacle) or into anolher outlet (receptacle) wired into the same circuit.
17. It is normal for the heater's plug and cord to feel warm to the touch. A plug or cord which becomes hot to the touch or becomes distorted in shape may be a result of a worn electrical outlet. Worn outlets or receptacles should be replaced prior to further use of the heater. Plugging heater into a worn outlet /receptacle/ may result in overheating of the power cord or fire.
18. **Do not use an extension cord because it may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be No. 1 4 AWG minimum size and rated not less than 1875 watts, and has to be used only for supplying power to this heater.**
19. Be sure that the plug is fully inserted into an appropriate receptacle. Please remember that receptacles also deteriorate due to aging and continuous use: check periodically if signs overheating or deformations are evidenced by the plug. Do not use the receptacle and CALL your electrician.
20. Check that neither the appliance nor the power cable have been damaged in any way during transportation.
21. Make sure that no pieces of polystyrene or other packaging material have been left between one element of the appliance and another. It may be necessary to pass over the appliance with a vacuum cleaner.
22. **When switching on the appliance for the first time, allow it to run at full power for about two hours to get rid of the unpleasant smell. Make sure that the room in which the appliance is located is well ventilated during this operation. It is normal for the appliance to emit small cracking sounds when you turn it on for the first time.**

CAUTION: To prevent electric shock match wide blade of plug to wide slot, fully insert.

SAVE THESE INSTRUCTIONS

HOW TO USE

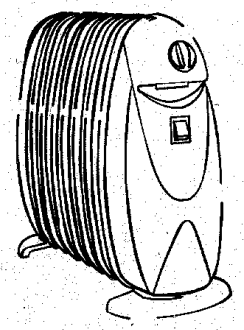

BE CAREFUL
Operate the heater in upright position only. Any other position could create hazard situation!

ON/OFF Switches

WATTS ECONOMIZER
For more economical use, the Min. or Med. Watt switches may be used individually, after unit has reached the operating temperature.

With pilot lights ON, the heater is ON!

1. LOCATION
Place heater on floor beneath coldest window in the room or any desired location. Your heater will minimize the effect of cold drafts.
The heater must not be located immediately below a socket-outlet.
Do not use this radiator in rooms having a surface area less than 4 m^2.

2. CONNECTION
The radiator must be connected to a properly polarized A/C 110/120 V household outlet in perfect working conditions.
Keep loose clothing or bedding, furniture and flammable material away from the wall outlet where the heater plug is fitted in.

3.Alci (Appliance Leakage Current Interrupter) SAFETY DEVICE

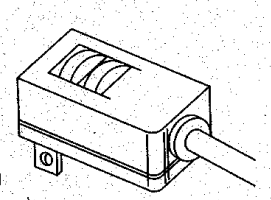

This device provides protection against electric shock due to ground fault currents by automatically shutting off the power. To test the operation of the ALCI Safty Device, switch the heater ON at either the 1 or 2 setting. Press the TEST button on the ALCI device attached to the plug end of the line cord. The heater and fan should stop operating and the Power Light should be extinguished. Press the RESET button on the ALCI device to resume normal operation of the heater. This device should not be used as on ON/OFF operation switch.
"CAUTION: ALTHOUGH THIS DEVICE IS PROVIDED WITH PROTECTION WHICH REDUCES THE RISK OF ELECTRIC SHOCK, THIS PRODUCT SHOULD NEVER BE USED CARELESSLY NEAR WATER."

4. SWITCHING ON TWO-SWITCH MODELS
Turn thermostat clockwise to the maximum position. Switch on both switches. The lights on the switches remain on indipendent of the cycling of the thermostat. When room reaches the desired temperature, turn the thermostat knob counter clockwise very slowly and carefully until you hear a "click". This will automatically set your unit to cycle on and off at that desired heat setting. (For timer instructions, see point 5)
Note: It will normally require approx.15 minutes to reach operating temperature.

5. USE OF THERMOSTAT

The thermostat operates on room air temperature and not radiator temperature. Counter clockwise direction - lower number, lower temperature. Clockwise direction- higher number, higher temperature.

Antifreeze function

Turn the thermostat dial to the ✱ position and press the switches. The appliance will maintain a minimum room temperature of approximately 5°C thus preventing freezing, with a minimum energy consumption.

REMINDER

To completely shut unit off, ON/OFF switches must be placed in OFF position.

6.HOW TO USE THE TIMER2

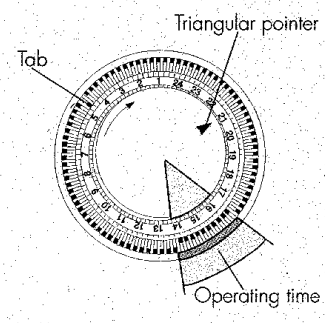

Please refer to the illustration below:

IMPORTANT: There are 96 tabs around the dial. Each tab represents a 1/4 hour (15 minutes) and there is a tab for every quarter hour of the 24 hour day. Your appliance can be programmed to switch itself ON and OFF at the time you want. With the timer you can approximate your setting to within 15 minutes and program up to 48 cycles (1 cycle = 1 "ON" + 1 "OFF") over a period of 24 hours (12 hours a.m.+12 hours p.m.).

The tabs can be pushed inwards or pulled outwards by merely using your fingers. When the tab is in the inward position (towards the center of the dial), the heater **will operate** during that 15 minute period. If the tab is in the outward position, the heater **will not operate** during this period.

Please note when you first use your heater, all the tabs are outwards. You must push in those tabs for the period that you want the heater to work. (If you want to bypass the timer you must push all 96 tabs inward).

Timer operation

a). Plug in the heater.

b). Turn timer dial clockwise to set clock with the current time of day (see CLOCK SETTING).

c). Push tabs inwards for the period you want the heater to operate. For example, in the shown illustration, the heater will operate from 14.00 (2 p.m.) to 16.30 (4.30 p.m.) and from 4.45 a.m. to 5 a.m.

d). Push switch(-es) in.

e). Once you have set the tabs for the desired heating periods, your heater will cycle on and off according to these settings.

f). As long as you keep the heater plugged in, the timer will continue to keep proper time.

7. MAINTENANCE AND SERVICE

Always remove the plug from the power socket and allow the radiator to cool. Wipe radiator with a soft damp cloth, do not use detergents and abrasives.
Should the radiator not be in use over a certain length of time, wind the cable round the holder and store it in a dry place (see fig. in front page).
This appliance has been built to give many years of trouble free service.
In case of malfunction or doubt, do not try to repair the heater by yourself: it may results in fire hazard or electric shock.
Call nearest Service Center (see attached list of Service Centers).

The appliance is fitted with a **safety device** which will switch off it in case of accidental overheating. To reset, disconnect the plug from the power for 30 minutes, remove the cause of overheating then plug the appliance in again.

ATTENTION: in order to avoid any danger caused by an accidental resetting of the safety system, this appliance must not be powered through an external timer.

Your product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

DēLonghi

LIMITED WARRANTY

What Does This Warranty Cover? We warrant each appliance to be free from defects in material and workmanship. Our obligation under this warranty is limited to replacement or repair, free of charge at our factory or authorized service centers, of any defective or parts thereof other than parts damaged in transit, which shall be returned to us, transportation prepaid. Please be advised that any shipping cost for replacement items will be charged to the consumer.This warranty shall apply only if the appliance is used in accordance with the factory directions which acompany it.

How Long Does The Coverage Last? This warranty runs for one year from the date of delivery and applies only to the original purchase for use.

What Does This Warranty Not Cover? This warranty does not cover defects or damage of the appliance which result from repairs or alterations to the appliance outside our factory or authorized service centers, nor shall it apply to any appliance which has been subject to abuse, misuse, negligence or accidents. Also, consequential and incidental damages resulting from the use of this product or arising out of any breach of contract or breach of this warranty are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

How Do You Get Service? If repairs become necessary or spare parts are needed, please write to:

De'Longhi America Inc.
Park 80 West Plaza One, 4th floor
Saddle Brook N.J. 07663
or call Service Tel. No: 1-800-322-3848

The above warranty is in lieu of all other express warranties and representations. All implied warranties are limited to the applicable warranty period set forth above. This limitation does apply if you enter into an extended warranty with De' Longhi. Some states do not allow limitations on how long an implied warranty lasts, so the above exclusions may not apply to you. De' Longhi does not authorize any other person or company to assume for it any liability in connection with the sale or use of its appliance.

How Does State Law Apply? This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.